

U-Build It Enclosure Guide

UB4755

Horizontal Format Dual 12" + Compression Driver system

Specifications

Guidelines 2

Construction Drawings

Network Schematic

Components and Connections

UB477

Vertical Format Dual 15" + Compression Driver System

Specifications

Guidelines

Construction Drawings

Network Schematic

Components and Connections Connector Panel Layout

> Setting up Your **System**

BEOBUS

Add-on Subwoofer System

UBSUB

Dual (18")

Specifications

Guidelines

Construction Drawings

Components and Connections

JBL Professional Enclosure Guide

1. Introduction

JBL components are known worldwide as the best money can buy. This guide contains construction details, filter network schematics and connection diagrams for enclosure designs using some of the most popular of those components, the 2206H, 2226H, 2242H, 2447J and 2404H. These enclosures are based on popular JBL systems, but have been modified for ease of construction for the intermediate level woodworker. By following the instructions herein you can build your own system to perform as well some of JBL's best designs.

1.1. Cabinet construction

Material should be 19 mm, 13 ply void free plywood for general purpose portable applications or high grade MDF board for less portable applications

Ducts can be made of PVC pipe or hard cardboard tubes such as those found in carpet rolls.

Joints should be glued and screwed. Care should be taken to ensure tight joinery in order to make the enclosure airtight.

Handles and connector plates must be made airtight. Silicone cement can be used here and in corners to seal the enclosure.

Interior of box should be lined with damping material, such as fiberglass insulation, to reduce internal standing waves. Be sure to keep port openings free of material as blockage will decrease their effectiveness.

Drivers are mounted on the front of the baffle using screws and T-nuts in the baffle. This allows easy access to interior to adjust damping and easy driver replacement.

1.2 .Construction Tips

Everything is built around the baffle. The baffle rests in dado (groove) in each of the two sides and top and bottom panels.

Install T-nuts for Drivers and Horns prior to assembly.

The Top and bottoms panels fit OVER the side panels.

Install the back panel LAST. This will allow access to the interior for placement of damping material.

Dry fit all parts before final construction.

2. The full range systems: UB4755 and UB4770

2.0. Introduction

The UB4755 and UB4770 are 2-way 12" or 15" woofer and HF compression driver designs with the option of adding two super tweeters, for 3-way systems. The 12" version is a horizontal format for low profile single unit use and the 15" is an "arrayable" trapezoidal design for use where multiple units are to used together to form a larger system.

The components used are as follows:

Table 1. Components used for UB4755 and UB4770

Name / Description	Configuration	LF	MF	Horn	VHF
UB4755	2-way	(2) 2206H	2446J	2380A	-
Dual 12" with driver					
UB4755	3-way	(2) 2206H	2446J	2380A	(2) 2404H
Dual 12" with driver			0 10		
and tweeters			1597	(0)256	
UB4770	2-way	(2) 2226H	2446J	2380A	
Dual 15" with driver	36	0(05			\otimes
UB4770	3-way	(2) 2226H	2446J 🖳	2380A	(2) 2404H
Dual 15" with driver	0)65		191		D
and tweeters		97 99	1(0)50		

2.1. Connection

Two 8-pin Neutrik Speakon connectors are specified so that you may loop through to another cabinet (note that that will get you a 2 ohm load) or a subwoofer. DO NOT CONNECT MORE THAN TWO CABINETS IN PARALLEL. Do not use series wiring.

Table 2 Connector Pin Assignments

	Passive	Active
Pin #s	Use	Use
+4,-4	not used	VHF (2x2404H Super tweeters, optional)
+3,-3	not used	HF, 2446J compression driver
+2,-2	full range	LF, 2x2206H or 2x2226H ()
+1,-1	not used or loop through	not used or loop through for subwoofer
	for subwoofer	a(0)

2.2 Amplifiers

The following amplifiers should be used:

Table 3 Amplifiers for each Passband

	Passive	Active
Pin #s	Amplifier	Amplifier
+4,-4	unused	JBL MPA275, 275W per channel at 4
	1 0 2 1 2 5	ohms (optional)
+3,-3	unused	JBL MPX600, 600W per channel at 4
	N/163	ohms
+2,-2	JBL MPX1200, 1200W per channel at	JBL MPX1200, 1200W per channel at
	4 ohms	4 ohms
+1,-1	unused	unused

The amplifiers should be driven clean, that is, without clipping. At the most, clip lights should just turn on during occasional programme peaks.

Note: In two-way active mode, you may use an MPA1100 amplifier for the low frequency and make use of the IM-10 input crossover module. See the crossover section below.

2.3. Crossover

For the passive version, a passive crossover is built-in. For the active versions, a JBL M552 or M553 should be used. The table below details what x-over model, how many units will be needed for a stereo system and what crossover frequencies should be used. Note that you should assign 2380 series horn EQ to the 2446J MF compression driver. Make sure that:

- a) it is set for 2380 equalization
- b) It is assigned to the outputs that will drive the compression driver.

The manual for the M552 or M553 contains specific information on how to make the proper settings.

An alternative to using an external crossover in two way active mode with the UB4755 or UB4770 is to use an IM-10 input crossover module and an MPA1100 amplifier for the low frequencies, instead of an M552 and an MPX1200 amplifier. This will provide a more compact system that cannot be modified externally and therefore provides protection against unauthorized alteration. Horn equalization for the 2380 series of horns is also provided in the module and should be engaged.

 Table 4 Optimum Crossover Frequencies and Equipment Options

Name	Description	Configuration	X-over model	Number	X-over		
	-	Ω	/ mode	(stereo)	frequencies		
UB4755	Dual 12/15"	2-way active	M552 / stereo	1	1200 Hz,		
or	with driver	05	2-way mode	$\mathcal{P}(\mathcal{O})$	engage 2380 EQ		
UB4770	9019		[9]	5	for MF		
UB4755	Dual-12/15"	2-way active	IM-10 input	1	1200 Hz,		
10005 J	with driver		module for	П	engage 2380 EQ		
UB4770	96	1350	MPA1100	5 (0)	fer MF		
			amplifier	160			
UB4755	/Dual 12/15"	3-way active	M553 / stereo	1	1200 Hz, 7k Hz,		
$(or) \cup (i)$	with driver and	m 77 (0)	3-way mode		engage 2380 EQ		
UB4770	tweeters	W E B			for MF		
- 4P (O) 25 C							
500							

Note that you will need to balance the output for each of the frequency bands in relation to the others.

3. The Subwoofer system : UBSUB

3.0. Introduction

The UBSUB is a dual 18" system that utilizes the highest output 18" cone bass transducer currently available from any manufacturer, the 2242H. The 2242H is designed for smaller enclosures and to provide a more "punchy" or "faster" low frequency response required for live sound and dance club PA applications.

3.1. Connection

Two 8-pin Neutrik Speakon connectors are specified so that you may loop through to full range cabinets or another subwoofers (note that that will get you a 2 ohm load). DO NOT CONNECT MORE THAN ONE CABINET TO THE AMPLIFIER. Do not use series wiring.

Table 5 Connector Pin Assignments for UBSUB

	Active
Pin #s	Use
+4,-4	not used or Toop through for full range cabinets 5 57 (0)500
+3,-3	not used or loop through for full range cabinets
+2,-2	not used or loop through for full range cabinets
41,-1	Subwoofer, 2x2242H

Note: 4-pin Neutrik Speakon connectors can also be used provided that you will be using the full range systems in passive mode. In that case keep the pin number the same (+2,-2) and use (+1,-1) for looping through to the subwoofer if you have it.

3.2. Amplifiers

The following amplifiers should be used:

Table 6 Amplifiers for UBSUB

	Active	
Pin #s	Amplifier	
+4,-4	unused	
+3,-3	unused	72 9800
+2,-2	unused	
+1,-1	JBL MPX1200, 2400W in bridge mode at 4 ohms	

Note that the amplifier is used in bridge mode, so that only one dual 18" cabinet maybe connected to one amplifier. Using the MPX1200 in bridge mode also means it has more input gain, so you should turn the subwooter output down to compensate.

The amplifier should be driven clean, that is, without clipping. At the most, clip lights should just turn on during occasional programme peaks.

3.3. Crossover

The subworfer system does not have a passive crossover and NEEDS AN ACTIVE crossover. Do not wire it in parallel with a full-range system as this only rob power from both resulting in poor sound quality.

JBL cross over models M552 or M553 should be used. The table below details what x-over model, how many units will be needed for a stereo system and what crossover frequencies should be used. Note that you should assign 2380 series horn EQ to the 2446J MF compression driver. Make sure that:

- a) it is set for 2380 equalization
- b) It is assigned to the outputs that will drive the compression driver.

The manual for the M552 or M553 contains specific information on how to perform make the settings.

Description	Configuration	X-over model	X-over frequencies
		∄mode ∪	
UBSUB subwoofer +	2-way active	M552 / stereo 2-	80-150 Hz 555
UB4755/4770 in \		way mode	
passive version	5	00 0	
UBSUB subwoofer +	2-way active	M5521 stereo 2-	80-150 Hz
UB4755/4770 with 9	0650	way mode	15(0)
tweeters in passive		57 99(
version (V) 335		12/10/50	
UBSUB subwoofer +	3-way active	M553 / stereo 3-	80-150 Hz, 1200 Hz, engage
₩B4755/4770 in	597 15 2	way mode	2380 EQ for MF
active version <	() $()$ $()$		
UBSUB subwoofer +	4-way active	M553 / mono 4-	80-150 Hz, 1200 Hz, 7k Hz,
UB4755/4770 with		way mode	engage 2380 EQ for MF
tweeters in active		(2 units needed)	
version			

 Table 7 Optimum Crossover Frequencies and Equipment Options

Note that you will need to balance the output for each of the frequency bands in relation to the others.

If your system allows it, is always good practice to introduce a high pass filter (sometimes referred as a subsonic filter) beyond the lowest frequency of operation. This will improve power handling by avoiding excessive cone excursion and will maximize system headroom. For a 4755 or 4770 use a high pass filter at 40 Hz. When using a 4755 or 4770 in conjunction with the UBSUB subwoofer, cut the subwoofer signal at 30 Hz (On the MPX series of amplifiers you can accomplish this by engaging the 30 Hz filter on the front of the amplifier).

Additionally, you may want to replace the M553 or M552 for the UBL DSC260 3-way stereo/6-way mono digital system controller that will provide programmable cross over, EQ, limiting and time alignment or delay.

4. Setting Up

Before setting up the system interconnection cables should be assembled. It is essential that all cabling use the proper type and size of wire and that termination is done correctly. This will give the best performance from the system by eliminating losses from poor or incorrect connection.

4.1 Polarity

One of the most important considerations in cables is that they are in correct polarity. "In polarity" refers to all signals moving in the same direction at the same time. Having cables improperly connected "out of polarity" can cause cancellations at certain frequencies thereby adversely affecting frequency response especially at low frequencies. This translates simply into making certain the "+" and "-" connections are consistent throughout the system. JBL speaker systems exhibit outward ("positive") cone motion when a positive voltage is presented to the "+" terminal.

JBL electronics follow the Pin 2 "Hot" convention for wiring of XLR connectors.

4.1 Speaker Cable

Use the correct thickness for the impedance you will be driving and length of cable you will be running. Longer runs require thicker cable. Lower impedances also require thicker cables. The table below gives the maximum length of cable to be used for a given speaker load. For the best performance from your system these tables should be referenced for your choice of speaker cable.

	$=$ \leq $=$ \leq $=$ \leq $=$ \leq $=$ $=$ $=$ $=$ $=$ $=$ $=$ $=$ $=$ $=$	211050			
Gauge	Area mm²	2 Ohm	4 Ohm	8 ohm	16 ohm
10/7	5.26	18	74/36	72	144
	3.31	500 \$100 (C) 5 23	45	90
14	2.08	85	15	30	60
16	1.31)	5	9	18	36
18	.82	3	6	12	24
20	.52	2	4	8	16

Table 8 Maximum Cable Length (m) for Gauge of Wire and Speaker Impedance

4.2 Taking it further

For optimal fine tuning of your system we suggest the JBL SMAART PRO Software. SMAART PRO is a full function FFT(Fast Fourier Transform) measurement tool which allows the user to readily see where frequency response may need adjusting. The software can be used during a performance and only requires a PC, microphone, and mixer.

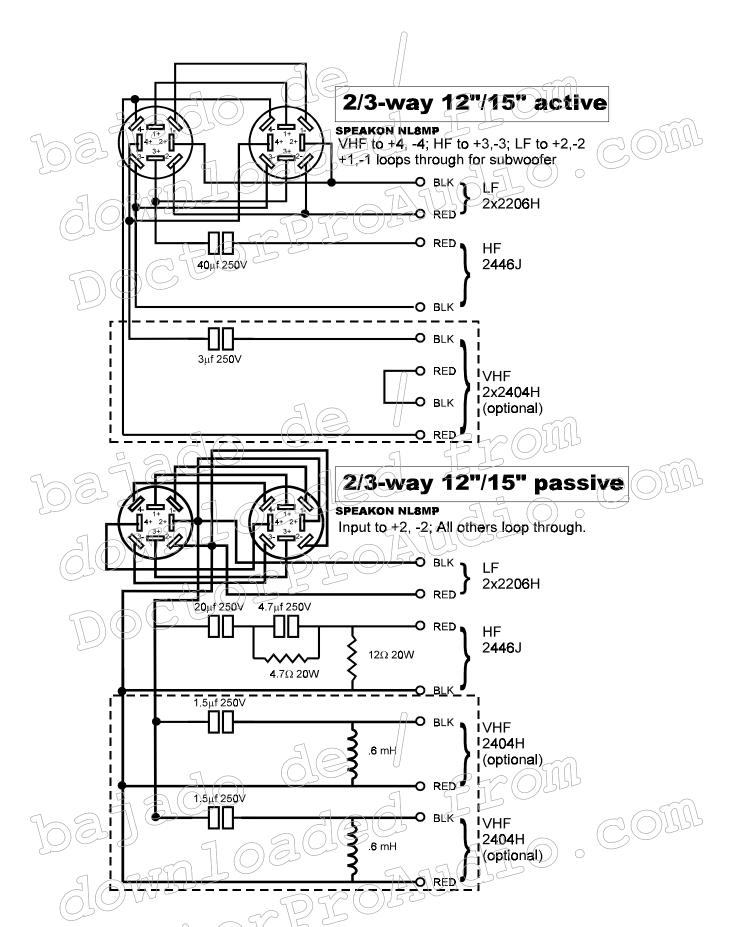


Figure 1 Network Schematics

